

Interior Drywall and Ceilings

With modified M201 Uni-mount for drywall



With modified M201 Uni-mount for ceilings





Remove the stop screw to make sure the beam hits the target's center line



M201 Uni-mount Modification for UL633


Existing M201 Uni-mount for HV401

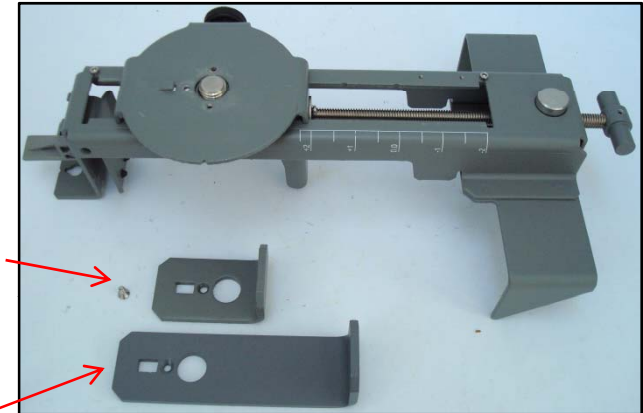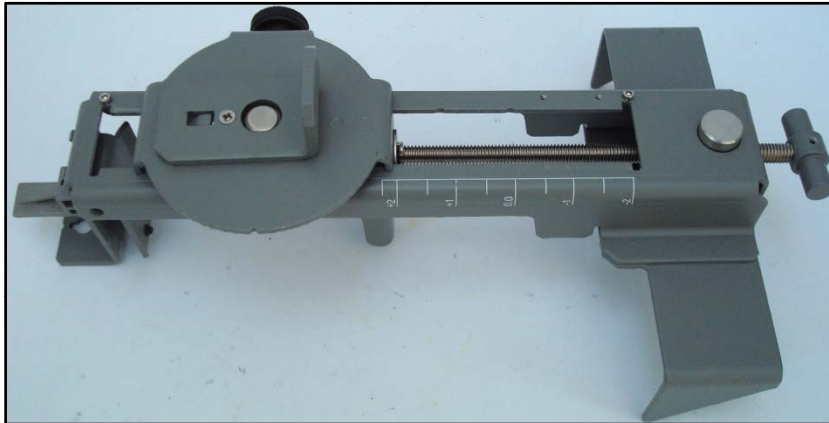

Old L-bracket

1475-1521 L-bracket

Modified M201 Uni-mount for UL633

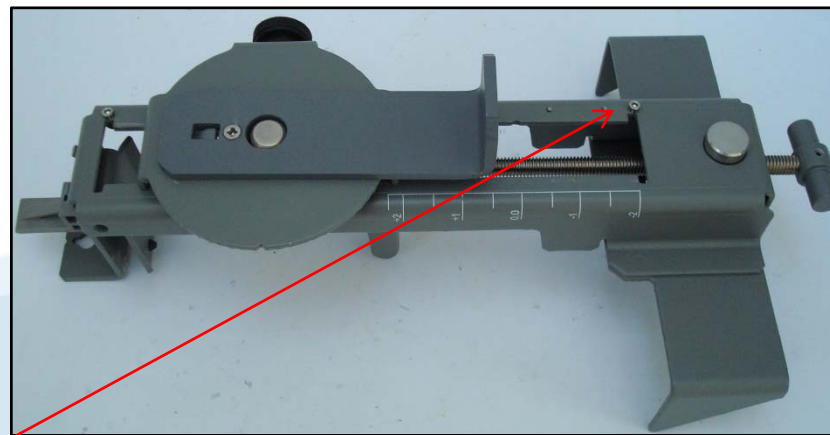

Remove the stop screw to make sure the beam hits the target's center line

