

GeoMax Zoom40 Series



User Manual

Version 1.1
English



Introduction

Purchase

Congratulations on the purchase of a GeoMax Zoom40 series instrument.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "1 Safety Directions" for further information.

Read carefully through the User Manual before you switch on the product.

Product identification

The model and serial number of your product are indicated on the type plate.


Always refer to this information when you contact your agency or GeoMax authorised service workshop.

Trademarks

- Windows is a registered trademark of Microsoft Corporation in the United States and other countries

All other trademarks are the property of their respective owners.

Validity of this manual

	Description
General	<p>This manual applies to Zoom40 instruments. Where there are differences between the models they are clearly described.</p> <p> The appearance of the products is subject to change without notice. The appearance of the actual product may vary slightly from the product shown in the illustrations.</p>
Telescope	<ul style="list-style-type: none">• Measuring with P modes: When measuring distances to a reflector with Electronic Distance Measurement (EDM) mode "P", the telescope uses a wide visible red laser beam, which emerges coaxially from the objective of telescope.• Measuring with NP modes: Instruments that are equipped with a reflectorless EDM additionally offer the EDM mode "NP". When measuring distances with this EDM mode, the telescope uses a narrow visible red laser beam, which emerges coaxially from the objective of telescope.

NOTICE



Do **NOT** remove the battery during operation of the instrument, or during the shutdown procedure.

This can result in a file system error and data loss!

Always switch off the instrument by tapping the Windows button in the bottom bar followed by Shut down from the menu. Wait until the instrument has shutdown completely before removing the battery.

Table of Contents

1	Safety Directions	6
1.1	General	6
1.2	Definition of Use	6
1.3	Limits of Use	7
1.4	Responsibilities	7
1.5	Hazards of Use	7
1.6	Laser Classification	10
1.6.1	General	10
1.6.2	Labelling	11
1.6.3	Distancer, Measurements without Reflectors (NP mode)	11
1.6.4	Distancer, Measurements with Reflectors	13
1.6.5	Red Laser Pointer	14
1.6.6	Laser Plummet	15
1.7	Electromagnetic Compatibility EMC	16
1.8	FCC Statement, Applicable in U.S.	17
1.9	ICES-003 Statement, Applicable in Canada	18
2	Description of the System	19
2.1	System Components	19
2.2	Container Contents	19
2.3	Instrument Components	20
3	User Interface	21
3.1	Keyboard	21
3.2	Screen	22
3.3	Status Icons	22
3.4	Softkeys	23
3.5	Operating Principles	24
4	Operation	26
4.1	Instrument Setup	26
4.2	Working with the Battery	28
4.3	Main Menu	28
4.4	Survey Application	29
4.5	Distance Measurements - Guidelines for Correct Results	30
5	Settings	31
5.1	General Settings	31
5.2	Regional Settings	31
5.3	Screen Settings	32
5.4	EDM Settings	33
5.5	Communication Settings	35
5.6	Unit Settings	36
6	Tools	38
6.1	Calibration	38
6.1.1	Overview	38
6.1.2	Preparation	38
6.1.3	Calibrating Line-of-Sight, Vertical Index Error and Compensator Index Error	39
6.1.4	Calibrating the Level of the Instrument and Tribrach	40
6.1.5	Inspecting the Laser Plummet of the Instrument	41
6.1.6	Servicing the Tripod	42
6.2	System Information	42
6.3	Loading Software	43
7	Working with interfaces	44
7.1	Working with a USB Memory Stick	44
7.2	Working with Bluetooth	44

8	Care and Transport	45
8.1	Transport	45
8.2	Storage	45
8.3	Cleaning and Drying	45
9	Technical Data	47
9.1	Angle Measurement	47
9.2	Distance Measurement with Reflectors	47
9.3	Distance Measurements without Reflectors (Reflectorless mode)	48
9.4	Conformity to National Regulations	48
9.4.1	Zoom40	48
9.4.1.1	Dangerous Goods Regulations	49
9.4.2	Internal battery ZBA301	49
9.5	General Technical Data of the Product	50
9.6	Scale Correction	52
9.7	Reduction Formulas	54
10	Software Licence Agreement	56
11	Glossary	57
Appendix A	Menu Tree	60
Appendix B	Directory Structure	61

1 Safety Directions

1.1 General

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

About warning messages






Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described here.

DANGER, WARNING, CAUTION and **NOTICE** are standardised signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety, it is important to read and fully understand the following table with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Type	Description
	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

1.2 Definition of Use

Intended use

- Measuring horizontal and vertical angles.
- Measuring distances.
- Recording measurements.
- Visualizing the aiming direction and vertical axis.
- Data communication with external appliances.
- Computing by means of software.

Reasonably foreseeable misuse

- Use of the product without instruction.
- Use outside of the intended use and limits.
- Disabling safety systems.
- Removal of hazard notices.
- Opening the product using tools, for example screwdriver, unless this is specifically permitted for certain functions.
- Modification or conversion of the product.
- Use after misappropriation.
- Use of products with obviously recognisable damages or defects.
- Use with accessories from other manufacturers without the prior explicit approval of GeoMax.
- Aiming directly into the sun.
- Inadequate safeguards at the working site.
- Deliberate dazzling of third parties.
- Controlling of machines, moving objects or similar monitoring application without additional control- and safety installations.

1.3

Limits of Use

Environment

Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.

 **WARNING**

Working in hazardous areas, or close to electrical installations or similar situations.
Life Risk.

Precautions:

- ▶ Local safety authorities and safety experts must be contacted by the person responsible for the product before working in such conditions.

1.4

Responsibilities

Manufacturer of the product

GeoMax AG, CH-9443 Widnau, hereinafter referred to as GeoMax, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.

Person responsible for the product

The person responsible for the product has the following duties:

- To understand the safety instructions on the product and the instructions in the user manual.
- To ensure that it is used in accordance with the instructions.
- To be familiar with local regulations relating to safety and accident prevention.
- To inform GeoMax immediately if the product and the application becomes unsafe.
- To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters or lasers are respected.

1.5

Hazards of Use

 **CAUTION**

Dropping, misusing, modifying, storing the product for long periods or transporting the product

Watch out for erroneous measurement results.

Precautions:

- ▶ Periodically carry out test measurements and perform the field adjustments indicated in the User Manual, particularly after the product has been subjected to abnormal use as well as before and after important measurements.

DANGER

Risk of electrocution

Because of the risk of electrocution, it is dangerous to use poles, levelling staffs and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

- ▶ Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



CAUTION

Be careful when pointing the product towards the sun, because the telescope functions as a magnifying glass and can injure your eyes and/or cause damage inside the product.

Precautions:

- ▶ Do not point the product directly at the sun.

WARNING

Distraction/loss of attention

During dynamic applications, for example stakeout procedures, there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

- ▶ The person responsible for the product must make all users fully aware of the existing dangers.

WARNING

Inadequate securing of the working site.

This can lead to dangerous situations, for example in traffic, on building sites and at industrial installations.

Precautions:

- ▶ Always ensure that the working site is adequately secured.
- ▶ Adhere to the regulations governing safety, accident prevention and road traffic.

CAUTION

Not properly secured accessories.

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

- ▶ When setting up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.
- ▶ Avoid subjecting the product to mechanical stress.

 **WARNING**

Lightning strike

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

- ▶ Do not use the product in a thunderstorm.
-

 **CAUTION**

Inappropriate mechanical influences to batteries

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

- ▶ Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.
 - ▶ When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed.
 - ▶ Before transportation or shipping contact your local passenger or freight transport company.
-

 **WARNING**

Exposure of batteries to high mechanical stress, high ambient temperatures or immersion into fluids

This can cause leakage, fire or explosion of the batteries.

Precautions:

- ▶ Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.
-

 **WARNING**

Short circuit of battery terminals

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metallised paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

- ▶ Make sure that the battery terminals do not come into contact with metallic objects.
-


WARNING

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.
- Improper disposal of silicone oil may cause environmental contamination.

Precautions:

▶

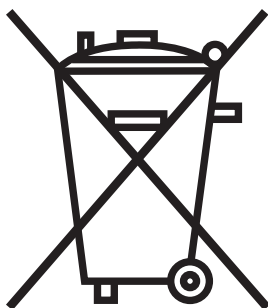

The product must not be disposed with household waste. Dispose of the product appropriately in accordance with the national regulations in force in your country. Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information is available from GeoMax AG.

WARNING

Only GeoMax authorised service workshops are entitled to repair these products.

1.6

Laser Classification

1.6.1

General

General

The following chapters provide instructions and training information about laser safety according to international standard IEC 60825-1 (2014-05) and technical report IEC TR 60825-14 (2004-02). The information enables the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.



According to IEC TR 60825-14 (2004-02), products classified as laser class 1, class 2 and class 3R do not require:

- laser safety officer involvement,
- protective clothes and eyewear,
- special warning signs in the laser working area

if used and operated as defined in this User Manual due to the low eye hazard level.



National laws and local regulations could impose more stringent instructions for the safe use of lasers than IEC 60825-1 (2014-05) and IEC TR 60825-14 (2004-02).

1.6.2

Labelling

Labelling Zoom40

Model: Zoom40 Art.No.: 1 2 3 4 5 6
 Equip.No.: 1234567
 Power: 12W/7.4V \approx , 1.5A max. S.No.: 1 2 3 4 5 6
 GeoMax AG
 CH-9443 Widnau
 Manufactured: 20XX

Made in China Developed by Hexagon Group Sweden
 Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.
 This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

Pav = 4.8mW λ = 658nm tp = 400ps
 IEC 60825-1:2014

a Laser beam

0015118.001

Labelling internal battery ZBA301

**This device complies with 15 of the FCC Rules. Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.**

MAX Type: ZBA301 Art.No.: 794086
 Li-Ion Battery: 7.4V \approx /4.4Ah \approx 10A 33Wh

GE GeoMax AG, CH-9443 Widnau
 Manufactured: 20XX S.NO.: 123456

UL US LISTED
 MH49009 4W/L5
 Made in China

015393.001

1.6.3

Distancer, Measurements without Reflectors (NP mode)

General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 3R in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

Direct intrabeam viewing may be hazardous (low eye hazard level), in particular for deliberate ocular exposure. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions. The risk of injury for laser class 3R products is limited because of:

- a) unintentional exposure would rarely reflect worst case conditions of (e.g.) beam alignment with the pupil, worst case accommodation,
- b) inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- c) natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value
Maximum average radiant power	4.8 mW
Pulse duration	400 ps
Pulse repetition frequency	320 MHz
Wavelength	658 nm
Beam divergence	0.2 mrad x 0.3 mrad
NOHD (Nominal Ocular Hazard Distance) @ 0.25 s	46 m / 151 ft

 **CAUTION**

From a safety perspective, class 3R laser products should be treated as potentially hazardous.

Precautions:

- ▶ 1. Prevent direct eye exposure to the beam.
- ▶ 2. Do not direct the beam at other people.


 **CAUTION**

Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces, etc.

Precautions:

- ▶ 1. Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections.
- ▶ 2. Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laser pointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.

Laser beam

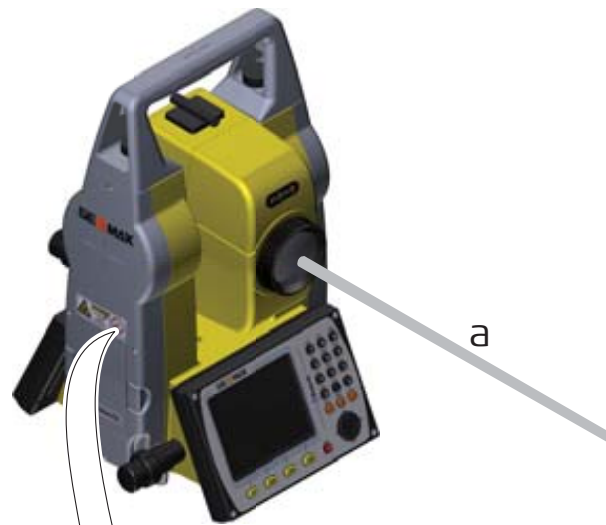

0015119.002

a Laser beam

1.6.4

Distancer, Measurements with Reflectors

General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 1 in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Wavelength	658 nm
Pulse duration	400 ps
Pulse repetition frequency (PRF)	320 MHz
Maximum average radiant power	0.33 mW
Beam divergence	1.5 mrad x 3 mrad

1.6.5

Red Laser Pointer

General

The laser pointer built into the product produces a visible red laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 3R in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

Direct intrabeam viewing may be hazardous (low eye hazard level), in particular for deliberate ocular exposure. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions. The risk of injury for laser class 3R products is limited because of:

- a) unintentional exposure would rarely reflect worst case conditions of (e.g.) beam alignment with the pupil, worst case accommodation,
- b) inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- c) natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value
Wavelength	658 nm
Maximum average radiant power	4.8 mW
Pulse duration	400 ps
Pulse repetition frequency (PRF)	320 MHz
Beam divergence	0.2 mrad x 0.3 mrad
NOHD (Nominal Ocular Hazard Distance) @ 0.25s	46 m / 151 ft

CAUTION

From a safety perspective, class 3R laser products should be treated as potentially hazardous.

Precautions:

- ▶ 1. Prevent direct eye exposure to the beam.
- ▶ 2. Do not direct the beam at other people.


CAUTION

Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces, etc.

Precautions:

- ▶ 1. Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections.
- ▶ 2. Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laser pointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.

Laser beam

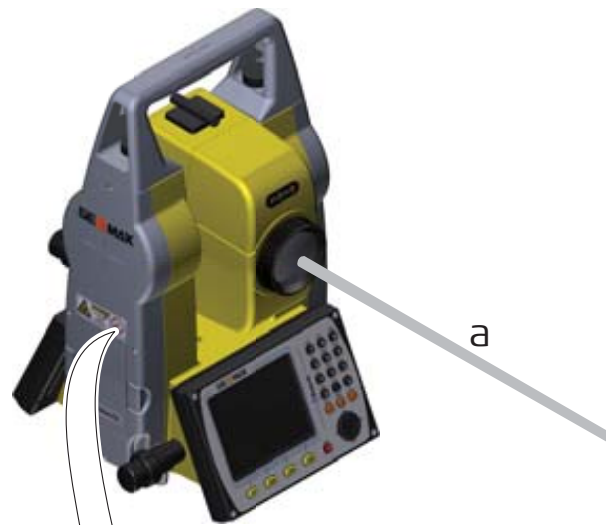

0015119.002

a Laser beam

1.6.6

Laser Plummet

General

The laser plummet built into the product produces a visible red laser beam which emerges from the bottom of the product.

The laser product described in this section is classified as laser class 2 in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe for momentary exposures but can be hazardous for deliberate staring into the beam. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions.

Description	Value
Maximum average radiant power	0.95 mW
Duty cycle	14%, 22%, 35%, 70%
Wavelength	635 nm
Pulse repetition frequency	1 kHz
Beam divergence	< 1.5 mrad
Beam diameter at aperture (1/e)	2.0 mm x 1.5 mm


⚠ CAUTION

From a safety perspective, class 2 laser products are not inherently safe for the eyes.

Precautions:

- ▶ 1. Avoid staring into the beam or viewing it through optical instruments.
- ▶ 2. Avoid pointing the beam at other people or at animals.

Laser beam

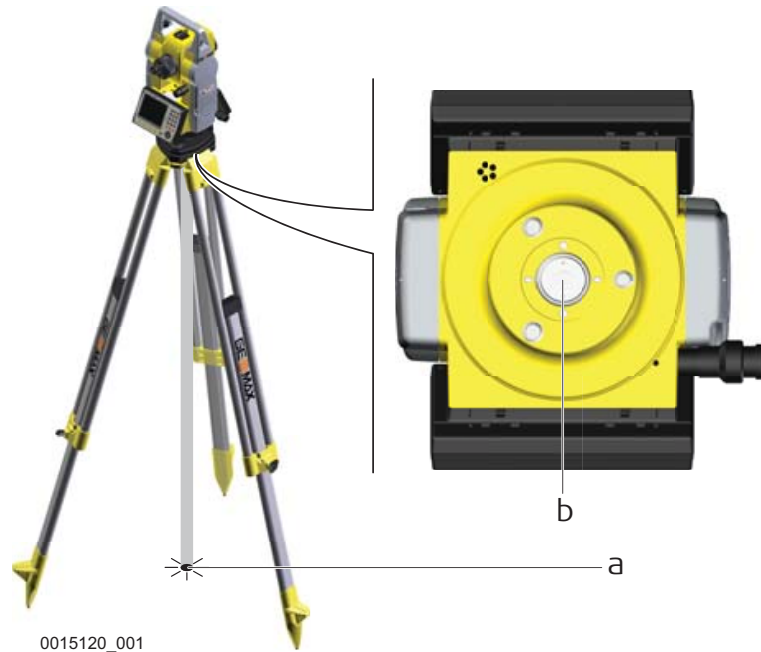

- a Laser beam
- b Exit for laser beam

1.7

Electromagnetic Compatibility EMC

Description

The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.

⚠ WARNING

Electromagnetic radiation can cause disturbances in other equipment.

Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment may be disturbed.

 **CAUTION**

There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries.

Precautions:

- ▶ Use only the equipment and accessories recommended by GeoMax. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.

 **CAUTION**

Disturbances caused by electromagnetic radiation can result in erroneous measurements. Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators.

Precautions:

- ▶ Check the plausibility of results obtained under these conditions.

 **CAUTION**

Electromagnetic radiation due to improper connection of cables

If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired.

Precautions:

- ▶ While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.

 **WARNING**

Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals.

Precautions:

- ▶ Although the product meets the strict regulations and standards which are in force in this respect, GeoMax cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected.
 - Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists.
 - Do not operate the product with radio or digital cellular phone devices near to medical equipment.
 - Do not operate the product with radio or digital cellular phone devices in aircraft.

1.8

FCC Statement, Applicable in U.S.



The greyed paragraph below is only applicable for products without radio.

 **WARNING**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **WARNING**

Changes or modifications not expressly approved by GeoMax for compliance could void the user's authority to operate the equipment.

1.9

ICES-003 Statement, Applicable in Canada

 **WARNING**

This Class (B) digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe (B) est conforme à la norme NMB-003 du Canada.

Canada Compliance Statement

This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference; and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Canada Déclaration de Conformité

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage;
2. l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2

Description of the System

2.1

System Components


Main components

Component	Description
Zoom40 instrument	An instrument for measuring data. Ideally suited for tasks from simple surveys to complex applications.
Firmware	The firmware package installed on the instrument. Consists of a standard base operating system.

2.2

Container Contents

Container contents

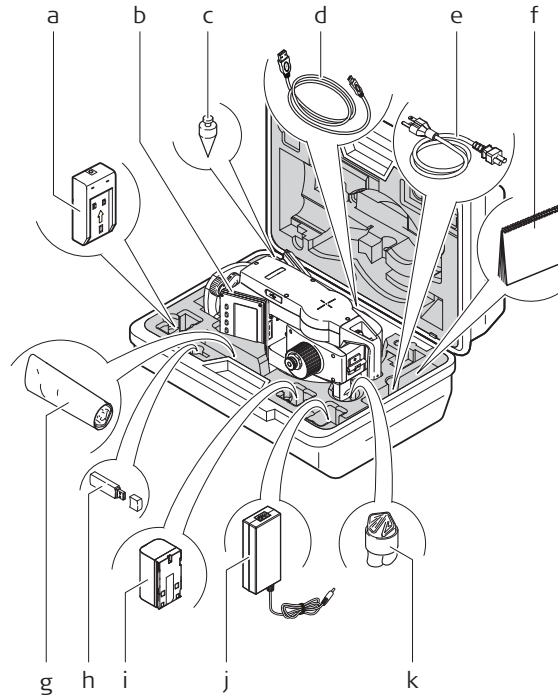


- a Battery charger
- b Instrument with supplied tribrach
- c Plumb bob
- d USB cable
- e Power cable for battery charger
- f Manual
- g Adjustment tools
- h USB memory stick
- i Battery
- j Adapter for charger
- k Protective cover

005937_001

2.3


Instrument Components

Instrument components part 1 of 2

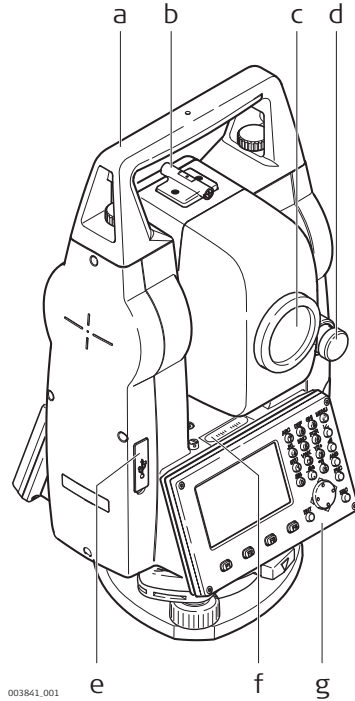

- a Detachable carrying handle with mounting screw
- b Optical sight
- c Objective with integrated Electronic Distance Measurement (EDM). Exit for EDM laser beam
- d Vertical drive
- e Compartment for USB cable port and USB host port
- f Leveling bubble
- g Keyboard

Instrument components part 2 of 2

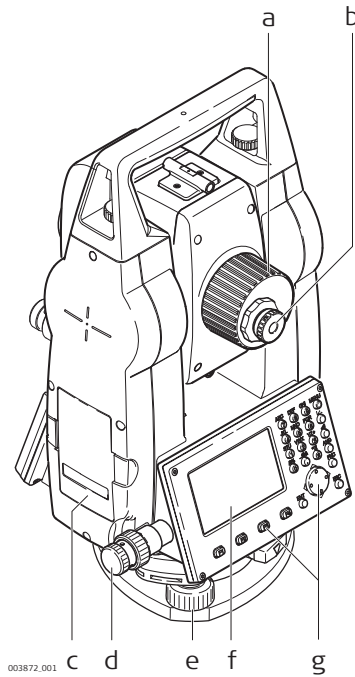

- a Focusing telescope image
- b Eyepiece; focusing graticule
- c Battery cover
- d Horizontal drive
- e Foot screw
- f Display
- g Keyboard


3

User Interface

3.1

Keyboard

Alphanumeric keyboard

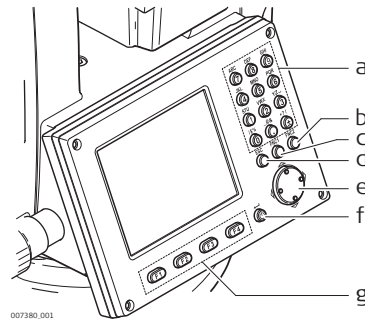

- a Alphanumeric keypad
- b Page key
- c **FNC** key
- d **ESC** key
- e Navigation key
- f **ON** key / **Enter** key
- g Function keys **F1** to **F4**


Keys

Key	Description
	Alphanumeric keypad for entry of text and numerical values.
	ON key. Turns on instrument. Enter key. Confirms an entry and continues to the next field when pressed for 1 s.
	FNC key. Quick-access to measurement supporting functions.
	Page key. Displays the next screen when several screens are available.
	ESC key. Quits a screen or edit mode without saving changes. Returns to next higher level.
	Navigation key. Controls the focus within the screen and the focus within a field.
	Function keys that are assigned the variable functions displayed at the bottom of the screen.

3.2

Screen

Screen

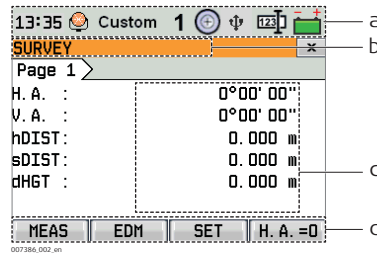

- a Status icons
- b Title of screen
- c Fields
- d Softkeys



All shown screens are examples. It is possible that local firmware versions are different to the basic version.

3.3









Status Icons

Description

The icons provide status information related to basic instrument functions. Depending on the firmware version, different icons may be displayed.

Icons

Icon	Description
	100% The battery symbol indicates the level of the remaining battery capacity. Tap the icon to open the SYSTEM INFO screen.
	75%
	50%
	25%
	5%
	Critical
	On Compensator symbol. Tap the icon to open the Level Up screen.
	Off
	Out of range
	IR EDM mode for measuring to prisms and reflective targets. Tap the icon to open the EDM SETTINGS screen.
	RL EDM mode for measuring to all targets. Tap the icon to open the EDM SETTINGS screen.

Icon	Description
	FOIL EDM mode for measuring to sticker targets. Tap the icon to open the EDM SETTINGS screen.
	Indicates that a user defined custom target has been set.
	Keypad is set to numeric mode.
	Keypad is set to alphanumeric mode.
1	Indicates that telescope position is face I. Tap the icon to open the Level Up screen.
2	Indicates that telescope position is face II. Tap the icon to open the Level Up screen.
	Bluetooth is connected. If the icon is grey, the Bluetooth communication port is selected, but the status is inactive. If the icon is blue, the status is active. Tap the icon to open the COMMUNICATION SETTINGS screen.
	USB communication port is selected. Tap the icon to open the COMMUNICATION SETTINGS screen.
	RS232 communication port is selected. Tap the icon to open the COMMUNICATION SETTINGS screen.
	A double arrow indicates that a field has a selectable list.

3.4

Softkeys

Description

Softkeys are selected using the relevant **F1** to **F4** function key. This chapter describes the functionality of the common softkeys used by the system. The more specialised softkeys are described where they appear in the program chapters.

Common softkey functions

Key	Description
ALPH	To change the keypad operation to alphanumeric.
NUM.	To change the keypad operation to numerical.
BACK	To return to the last active screen.
EDM	To view and change EDM settings. Refer to "5.4 EDM Settings".
MEAS	To start distance and angle measurements without saving the measured values.
OK	If entry screen: Confirms measured or entered values and continues the process. If message screen: Confirms message and continues with selected action or returns to the previous screen to reselect an option.
DEFAULT	To reset all editable fields to their default values.

3.5

Operating Principles

Turn instrument on

Press the **ON** key.

Turn instrument off

Return to WinCE main screen. Tap on the Windows icon in task bar to shut down the Zoom40.

Alphanumeric keypad


The alphanumerical keypad is used to enter characters directly into editable fields.

- **Numeric fields:** Can only contain numerical values. By pressing a key of the keypad the number will be displayed.
- **Alphanumeric fields:** Can contain numbers and letters. By pressing a key of the keypad the first character written above that key will be displayed. By pressing several times you can toggle through the characters. For example: 1->S->T->U->1->S....

Edit fields



ESC Deletes any change and restores the previous value.



Moves the cursor to the left



Moves the cursor to the right.



Inserts a character at the cursor position.




Deletes the character at the cursor position.



In edit mode the position of the decimal place cannot be changed. The decimal place is skipped.

Special characters

Character	Description
+/-	In the alphanumeric character set "+" and "-" are treated as normal alphanumeric characters with no mathematical function.
	"+" / "-" only appear in front of an entry.

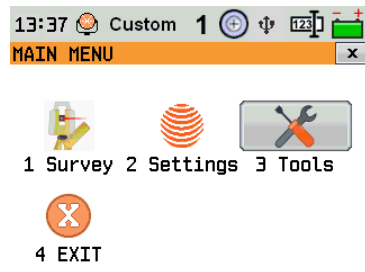

In this example selecting 3 on an alphanumeric keyboard would start Tools.

4

Operation

4.1

Instrument Setup

Description


This topic describes an instrument setup over a marked ground point using the laser plummet. It is always possible to set up the instrument without the need for a marked ground point.




Important features

- It is always recommended to shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.
- The laser plummet described in this topic is built into the vertical axis of the instrument. It projects a red spot onto the ground, making it appreciably easier to centre the instrument.
- The laser plummet cannot be used with a tribrach equipped with an optical plummet.

Tripod

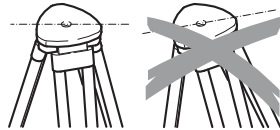


When setting up the tripod pay attention to ensuring a horizontal position of the tripod plate. Slight corrections of inclination can be made with the foot screws of the tribrach. Larger corrections must be done with the tripod legs.

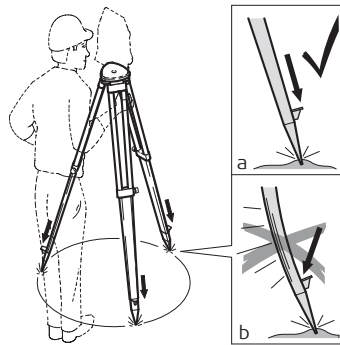

Loosen the clamping screws on the tripod legs, pull out to the required length and tighten the clamps.


- In order to guarantee a firm foothold sufficiently press the tripod legs into the ground.
- When pressing the legs into the ground note that the force must be applied along the legs.

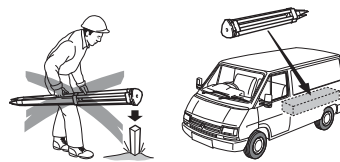

Careful handling of tripod.

- Check all screws and bolts for correct fit.
- During transport always use the cover supplied.
- Use the tripod only for surveying tasks.

Setup step-by-step

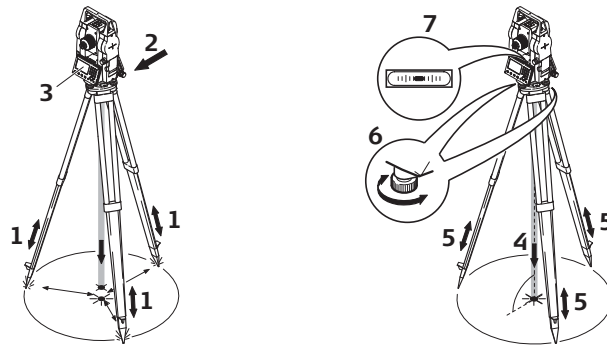

03851.001

- 1 Extend the tripod legs to allow for a comfortable working posture. Position the tripod over the marked ground point, centring it as best as possible.
- 2 Fasten the tribrach and instrument onto the tripod.
- 3 Turn on the instrument, and, if tilt correction is set on, the laser plummet activates automatically, and the **Level up** screen appears. Otherwise, tap on Level/Face icon in status bar.
- 4 Move the tripod legs (1) and use the tribrach footscrews (6) to center the plummet (4) over the ground point.
- 5 Adjust the tripod legs (5) to level the tubular level (7).
- 6 Use the electronic level and turn the tribrach footscrews (6) to level the instrument precisely.
- 7 Center the instrument precisely over the ground point by shifting the tribrach on the tripod plate (2).
- 8 Repeat steps 6 and 7 until the required accuracy is achieved.


Level up with the electronic level step-by-step

The electronic level can be used to level up the instrument precisely by using the footscrews of the tribrach.

- 1 Turn the instrument until the tubular level is parallel to two footscrews.
- 2 Center the level on the instrument approximately by turning the footscrews of the tribrach.
- 3 Turn on the instrument, and, if tilt correction is set on, the laser plummet activates automatically, and the **Level up** screen appears. Otherwise, tap on Level/Face icon in status bar.
- 4 Center the electronic level for the first axis by turning the two footscrews.
- 5 Center the electronic level for the second axis by turning the last footscrew.




When the electronic level is centered and both axes are within the tolerance limit, the instrument has been levelled up.

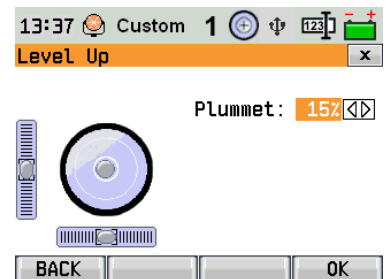

- 6 Accept with **OK**.

Position over pipes or holes

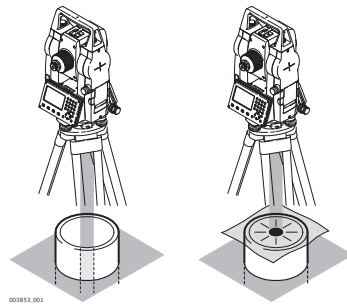

Under some circumstances the laser dot is not visible, for example over pipes. In this case, using a transparent plate enables the laser dot to be seen and then easily aligned to the center of the pipe.


4.2

Working with the Battery

Charging / first-time use


- The battery must be charged prior to using it for the first time because it is delivered with an energy content as low as possible.
- The permissible temperature range for charging is between 0°C to +40°C/+32°F to +104°F. For optimal charging we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by GeoMax, it is not possible to charge the battery if the temperature is too high.
- For new batteries or batteries that have been stored for a long time (> three months), it is effectual to make only one charge/discharge cycle.
- For Li-Ion batteries, a single discharging and charging cycle is sufficient. We recommend carrying out the process when the battery capacity indicated on the charger or on a GeoMax product deviates significantly from the actual battery capacity available.

Change the battery step-by-step

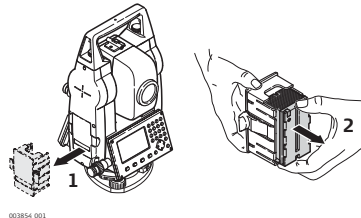

Remove the battery holder from the instrument (1).

Remove the battery from the battery holder (2).

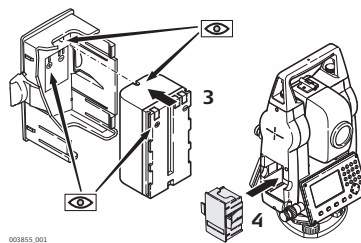

Insert the new battery into the battery holder (3), ensuring that the contacts are facing outward. The battery should click into position.

Insert the battery holder back into the battery compartment (4).


4.3

Main Menu

Description

The **MAIN MENU** is the starting place for accessing most functionality of the instrument. It is displayed when selecting the Zoom40 basic application from the WinCE main screen.

MAIN MENU

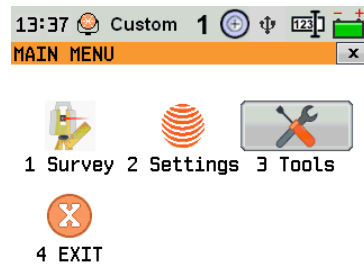

Description of the MAIN MENU functions

Function	Description
1 Survey	To select and start the survey application. Refer to "4.4 Survey Application".
2 Settings	To select and start Settings . Refer to "5 Settings".
3 Tools	To select and start Tools . Refer to "6 Tools".
4 EXIT	To exit Zoom40 Basic application.

4.4 Survey Application


Description

The Survey application can be used to take immediately measurements.

Access

Select **Survey** from the **MAIN MENU**.

SURVEY

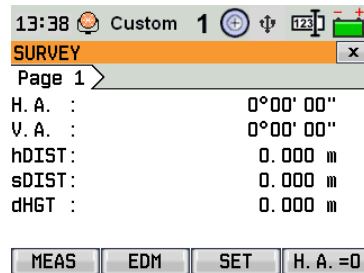

Survey softkeys

The following softkeys are displayed on the **Survey** screen.

Softkey	Description
MEAS	Trigger measurement.
EDM	Enter EDM Settings.
SET	Enter target height hr and station height hi.
H.A. = 0	Set horizontal angle to 0.

4.5


Distance Measurements - Guidelines for Correct Results

Description

A laser distancer (EDM) is incorporated into the Zoom40 instruments. In all versions, the distance can be determined by using a visible red laser beam which emerges coaxially from the telescope objective. There are two EDM modes:

- Prism measurements (P)
- Reflectorless measurements (NP)

NP measurements

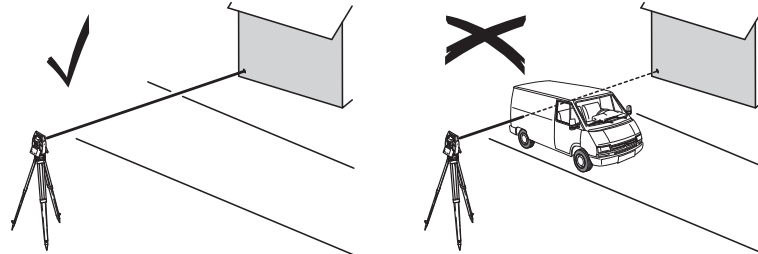

- When a distance measurement is triggered, the EDM measures to the object which is in the beam path at that moment. If a temporary obstruction, for example a passing vehicle, heavy rain, fog or snow is between the instrument and the point to be measured, the EDM may measure to the obstruction.
- Be sure that the laser beam is not reflected by anything close to the line of sight, for example highly reflective objects.
- Avoid interrupting the measuring beam while taking reflectorless measurements or measurements using reflective foils.
- Do not measure with two instruments to the same target simultaneously.

P measurements

- Accurate measurements to prisms should be made in P-Standard mode.
- Measurements to strongly reflecting targets such as traffic lights in Prism mode without a prism should be avoided. The measured distances may be wrong or inaccurate.
- When a distance measurement is triggered, the EDM measures to the object which is in the beam path at that moment. If for example people, cars, animals, or swaying branches cross the laser beam while a measurement is being taken, a fraction of the laser beam is reflected from these objects and may lead to incorrect distance values.
- Measurements to prisms are only critical if an object crosses the measuring beam at a distance of 0 to 30 m and the distance to be measured is more than 300 m.
- In practice, because the measuring time is very short, the user can always find a way of avoiding unwanted objects from interfering in the beam path.

Red laser to reflector foil

- The visible red laser beam can also be used to measure to reflective foils. To guarantee the accuracy the red laser beam must be perpendicular to the reflector foil and it must be well adjusted.
- Make sure the additive constant belongs to the selected target (reflector).

5

Settings


5.1

General Settings

Access

1. Select **Settings** from the **MAIN MENU**.
2. Select **General** from the **SETTINGS** menu.

General settings

Field	Description
Tilt Corr.	OFF Tilting compensation deactivated. ON Two-axis compensation. Vertical angles refer to the plummet line and the horizontal directions are corrected by the standing axis tilt. For corrections depending on the H.A. Corr. setting, refer to the table "Tilt and horizontal corrections".  If the instrument is used on an unstable base, for example a shaking platform or ship, the compensator should be deactivated. The deactivation avoids the compensator drifting out of its measuring range and interrupting the measuring process by indicating an error.
H.A. Corr.	ON Horizontal corrections are activated. For normal operation, the horizontal correction should remain active. Each measured horizontal angle is corrected, depending on the vertical angle. For corrections depending on the Tilt Corr. setting, refer to the table Tilt and horizontal corrections

Tilt and horizontal corrections

Setting	Correction				
Tilt correction	Horizontal correction	Incline longitudinal	Incline transversal	Horizontal collimation	Tilting axis
Off	On	No	No	Yes	Yes
On	On	Yes	Yes	Yes	Yes
Off	Off	No	No	No	No
On	Off	Yes	No	No	No

5.2

Regional Settings

Access


1. Select **Settings** from the **MAIN MENU**.
2. Select **Regional** from the **SETTINGS** menu.

Regional settings

Field	Description
H.A. Incr.	Right Set horizontal angle to clockwise direction measurement. Left Set horizontal angle to counter-clockwise direction measurement. Counter-clockwise directions are displayed but are saved as clockwise directions.
V.A. Setting	Sets the vertical angle.


Field	Description
-------	-------------

Zenith

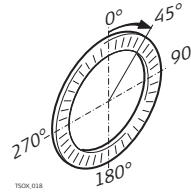


Zenith = 0°; Horizon = 90°.

Horizon

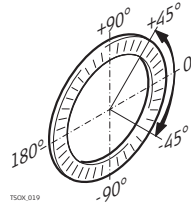

Zenith = 90°; Horizon = 0°. Vertical angles are positive above the horizon and negative below it.

Slope [%]

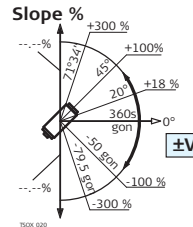

45°=100%; Horizon = 0°. Vertical angles are expressed in % with positive above the horizon and negative below it.

☞ The % value increases rapidly. --.% appears on the display above 300%.

Language	Sets the chosen language. Several languages can be uploaded onto the instrument. The current loaded language or languages are shown.	
Lang. Choice	If multiple languages are loaded, a screen to choose the language can be shown directly after switching on the instrument.	
	On	The language screen is shown as the startup screen.
	Off	The language screen is not shown as the startup screen.
Time	The current time.	
Date	Shows an example of the selected date format.	
Format	dd.mm.yyyy , mm.dd.yyyy or yyyy.mm.dd	How the date is shown in all date-related fields.



5.3


Screen Settings

Access

1. Select **Settings** from the **MAIN MENU**.
2. Select **Screen** from the **SETTINGS** menu.

Screen settings

Field	Description	
Screen Ill.	Off to 100%	Sets the display illumination in 20% steps.
Cross. Ill.	Sets the reticle illumination in three available steps: Low/Medium/High .	
Touch Screen	On	The touch screen is activated.
	Off	The touch screen is deactivated.
		 Press Calib. to calibrate the touch screen. Follow the instructions on the screen.
Auto-Off	Enable	The instrument switches off after 20 minutes without any activity, for example no key pressed or vertical and horizontal angle deviation is $\leq \pm 3''$.
	Disable	Automatic switch-off is deactivated.
		 Battery discharges quicker.
Beep	The beep is an acoustic signal after each key stroke.	
	Normal	Normal volume.
	Loud	Increased volume.
	Off	Beep is deactivated.
Sector Beep	On	Sector beep sounds at right angles (0° , 90° , 180° , 270° or 0, 100, 200, 300 gon).
	Off	Sector beep is deactivated.

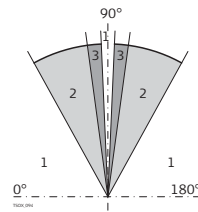

1. No beep.
2. Fast beep; from 95.0 to 99.5 gon and 105.0 to 100.5 gon.
3. Permanent beep; from 99.5 to 99.995 gon and from 100.5 to 100.005 gon.

5.4

EDM Settings


Description

The settings on this screen define the active EDM, **E**lectronic **D**istance **M**easurement. Different settings for measurements are available with Reflectorless (RL) and Prism (IR) EDM modes.

Access

1. Select **Settings** from the **MAIN MENU**.
2. Select **EDM** from the **Settings** menu.

EDM SETTINGS

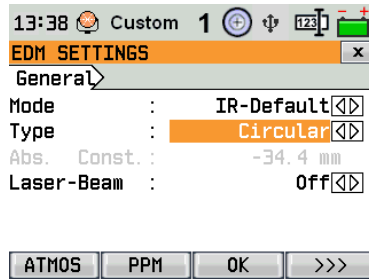

ATMOS

To enter atmospheric data ppm.

PPM

To enter an individual ppm value.

>>> **SCALE**

To enter projection scale details.

>>> **FREQ.**

To view the EDM frequency.

Field	Description		
Mode	IR-Default	Fine measuring mode for high precision measurements with prisms.	
	IR-Quick	Quick measuring mode with prisms, with higher measuring speed and reduced accuracy.	
	IR-Continuous	For continuous distance measurements with prisms.	
	Foil	For distance measurements using Retro reflective targets.	
	RL-Default	For distance measurements without prisms.	
	RL-Continuous	For continuous distance measurements without prisms.	
Type	Circular	ZPR100	Abs. Const.: -34.4mm
	Custom	The user can define their own prism. Constants can be entered in mm in Abs. Const.	
	Mini	ZMP100	Abs. Const.: -16.9mm
	JPMini	ZPM100	Abs. Const.: 0.0mm
	360°	ZPR1	Abs. Const.: -11.3mm
	360°Mini	GRZ101	Abs. Const.: -4.4mm
	Foil	ZTM100	Abs. Const.: 0.0mm
None	NP-modes	Abs. Const.: 0.0mm	
Abs. Const.	This field displays the GeoMax prism constant for the selected Type . When Type is Custom this field becomes editable to set a user defined constant. Input can only be made in mm. Limit value: -999.9mm to +999.9mm.		
Laser-Beam	Off	Visible laser beam is deactivated.	
	On	Visible laser beam for visualising the target point is activated.	

ATMOSPHERIC DATA ENTRY

This screen enables the entry of atmospheric parameters. Distance measurement is influenced directly by the atmospheric conditions of the air in which the measurements are taken. In order to take these influences into consideration distance measurements are corrected using atmospheric correction parameters.

The refraction correction is taken into account in the calculation of the height differences and the horizontal distance. Refer to "9.6 Scale Correction" for the application of the values entered in this screen.



When PPM=0 is selected, the GeoMax standard atmosphere of 1013.25 mbar, 12°C, and 60% relative humidity will be applied.

PROJECTION SCALE

This screen enables entry of the scale of projection. Coordinates are corrected with the PPM parameter. Refer to "9.6 Scale Correction" for the application of the values entered in this screen.

Free-PPM Entry

This screen enables the entry of individual scaling factors. Coordinates and distance measurements are corrected with the PPM parameter. Refer to "9.6 Scale Correction" for the application of the values entered in this screen.

EDM SIGNAL REFLECTION

This screen tests the EDM signal strength (reflection strength) in steps of 1%. Enables optimal aiming at distant, barely visible, targets. A percentage bar and a beeping sound, indicate the reflection strength. The faster the beep the stronger the reflection.

5.5

Communication Settings


Description

For data transfer the communication parameters of the instrument must be set.

Access

1. Select **Settings** from the **MAIN MENU**.
2. Select **Comm.** from the **Settings** menu.

COMMUNICATION SETTINGS

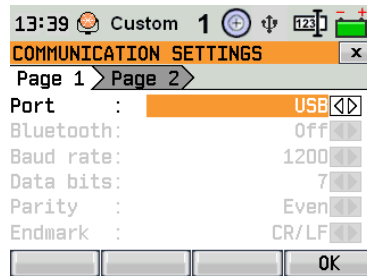

BTCode

The default Bluetooth code is '0000'.

Field	Description
Port	Instrument port.
	RS232 Communication is by the serial interface. Only for service purpose.
	USB Communication is by the USB host port.
	Bluetooth Communication is by Bluetooth.
Bluetooth	On Bluetooth sensor is activated.
	Off Bluetooth sensor is deactivated.

The following fields are active only when **Port: RS232** is set.

Field	Description
Baudrate	Speed of data transfer from receiver to device in bits per second. 1200, 2400, 4800, 9600, 14400, 19200, 38400, 57600, 115200

Field	Description	
Databits	7	Data transfer is realised with 7 databits.
	8	Data transfer is realised with 8 databits.
Parity	Even	Even parity. Available if data bit is set to 7.
	Odd	Odd parity. Available if data bit is set to 7.
	None	No parity. Available if data bit is set to 8.
Endmark	CR/LF	The terminator is a carriage return followed by a line feed.
	CR	The terminator is a carriage return.
Stopbits	1	Number of bits at the end of a block of digital data.


5.6

Unit Settings

Access

1. Select **Settings** from the **MAIN MENU**.
2. Select **Unit** from the **Settings** menu.

Unit Settings

Field	Description	
Angle Unit	° ' "	Degree sexagesimal. Possible angle values: 0° to 359°59'59"
	dec. deg	Degree decimal. Possible angle values: 0° to 359.999°
	gon	Gon. Possible angle values: 0 gon to 399.999 gon
	mil	Mil. Possible angle values: 0 to 6399.99mil.
		The setting of the angle units can be changed at any time. The current displayed values are converted according to the selected unit.
Min. Reading	° ' "	: (0° 00' 01" / 0° 00' 05" / 0° 00' 10").
	gon	(0.0001 / 0.0005 / 0.001).
	dec.deg	(0.0001 / 0.0005 / 0.001).
	mil	(0.01 / 0.05 / 0.1).
	Dist. Unit	meter
US-ft		US feet [ft].
INT-ft		International feet [fi].
ft-in/16		US feet-inch-1/16 inch [ft].
Dist. Decimal	Sets the number of decimal places shown for all distance fields. This is for data display and does not apply to data export or storage.	
	3	Displays distance with three decimals.
	4	Displays distance with four decimals.
Temp. Unit	Sets the units shown for all temperature fields.	
	°C	Degree Celsius.
	°F	Degree Fahrenheit.
Press.Unit	Sets the units shown for all pressure fields.	
	hPa	Hecto Pascal.
	mbar	Millibar.

Field	Description
mmHg	Millimeter mercury.
inHg	Inch mercury.

6 Tools

6.1 Calibration

6.1.1 Overview

Description

GeoMax instruments are manufactured, assembled and adjusted to a high quality. Quick temperature changes, shock or stress can cause deviations and decrease the instrument accuracy. It is therefore recommended to calibrate the instrument from time to time. This can be done in the field by running through specific measurement procedures. The procedures are guided and have to be followed carefully and precisely as described in the following chapters. Some other instrument errors and mechanical parts can be adjusted mechanically.

Electronic calibration

The following instrument errors can be checked and calibrated electronically:

- Horizontal collimation error, also called line-of-sight error.
- Vertical index error, and simultaneously the compensator index error and the electronic level.



For determining these errors, it is necessary to measure in both faces, but the procedure can be started in any face.

Mechanical calibration

The following instrument parts can be calibrated mechanically:

- Level on the instrument and tribrach.
- Laser plummet.
- Screws on the tripod.



During the manufacturing process, the instrument errors are carefully determined and set to zero. As mentioned, these errors can change and it is highly recommended to redetermine them in the following situations:

- Before the instrument is used for the first time.
- Before every high precision survey.
- After rough or long periods of transport.
- After long periods of work or storage.
- If the temperature difference between current environment and the temperature at the last calibration is more than 10°C (18°F).

6.1.2

Preparation



Before determining the instrument errors, level-up the instrument using the electronic level. The **Level up** is the first screen to appear after turning on the instrument. The tribrach, the tripod and the ground should be stable and secure from vibrations or other disturbances.



The instrument should be protected from direct sunlight in order to avoid thermal expansion on one side only.




Before starting to work, the instrument has to become acclimatised to the ambient temperature. Approximately two minutes per °C of temperature difference from storage to working environment, but at least 15 min, should be taken into account.

6.1.3

Calibrating Line-of-Sight, Vertical Index Error and Compensator Index Error

Line-of-sight error


The line-of-sight error, or horizontal collimation error is the deviation from the perpendicular between the tilting axis and the line of sight. The effect of the line-of-sight error to the horizontal direction increases with the vertical angle.

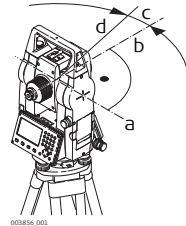

- a Tilting axis
- b Line perpendicular to tilting axis
- c Horizontal collimation, or line-of-sight, error
- d Line-of-sight

Vertical index error

The vertical circle should read exactly 90° (100 gon) when the line of sight is horizontal. Any deviation from this figure is termed vertical index error. This is a constant error that affects all vertical angle readings.

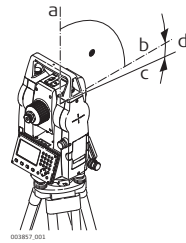


- a Mechanical vertical axis of the instrument, also called standing axis
- b Axis perpendicular to the vertical axis. True 90°
- c Vertical angle is reading 90°
- d Vertical index error



By determining the vertical index error the electronic level is adjusted automatically

Compensator index error

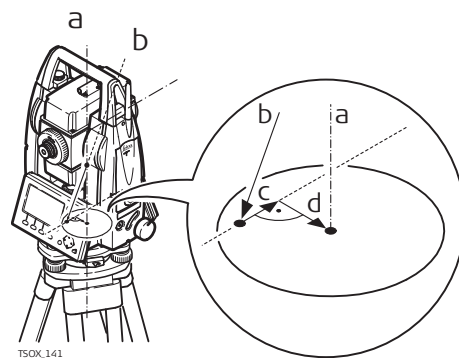

- a Mechanical vertical axis of the instrument, also called standing axis
- b Plumb line
- c Longitudinal component (l) of the compensator index error
- d Transversal component (t) of the compensator index error

The compensator index errors (l, t) occur, if the vertical axis of the instrument and the plumb line are parallel but the zero points of the compensator and the circular level do not coincide. The calibration procedure electronically adjusts the zero point of the compensator.

A longitudinal component in direction of the telescope and a transversal component perpendicular to the telescope define the plane of the dual axis compensator of the instrument.

The longitudinal compensator index error (l) has a similar effect as the vertical index error and affects all vertical angle readings.

The transversal compensator index error (t) is similar to the tilting axis error. The effect of this error to the horizontal angle readings is 0 at the horizon and increases with steep sightings.



The vertical index error and the compensator index error are determined simultaneously.

Access

1. Select **Tools** from the **MAIN MENU**.
2. Select **Calibr.** from the **TOOLS** menu.
3. Select a calibration option from the **CALIBRATION** screen.

Calibration options

In the **CALIBRATION** screen there are several calibration options.

Menu selection	Description
HA-Collimation	Refer to "6.1.3 Calibrating Line-of-Sight, Vertical Index Error and Compensator Index Error".
Vertical Index	Refer to "6.1.3 Calibrating Line-of-Sight, Vertical Index Error and Compensator Index Error".
View Adjustment Data	Displays the current calibration values that have been set for HA-Collimation and V-index.




The procedures and conditions required to correct line-of-sight and vertical index errors are the same, therefore the procedure will only be described once.

6.1.4

Calibrating the Level of the Instrument and Tribrach

Calibrate the level step-by-step

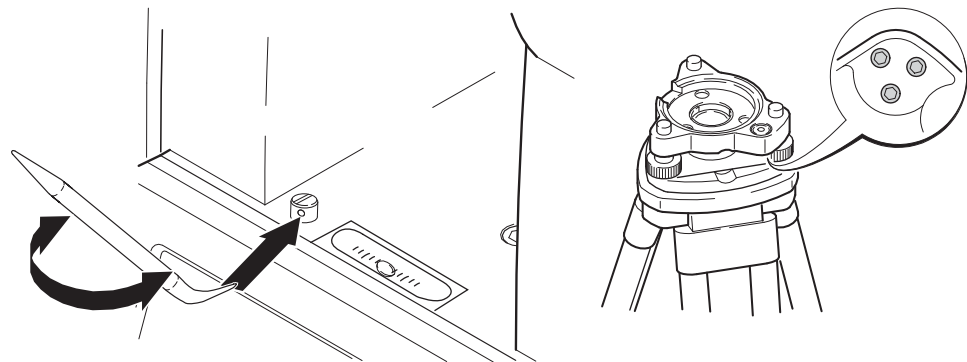

- 1 Place and secure the tribrach onto the tripod, and then secure the instrument onto the tribrach.
- 2 Using the tribrach footscrews, level the instrument with the electronic level. To activate the electronic level, turn on the instrument, and, if tilt correction is set on, the **Level up** screen appears automatically. Alternatively, tap on the Level/Face icon in status bar.
- 3 The bubbles of the instrument and tribrach levels must be centered. If one or both levels are not centered, adjust as follows.

Instrument: If the bubble extends beyond the lines, use the Allen key supplied to center it with the adjustment screws.

Tribrach: If the bubble extends beyond the circle, adjust it using the adjustment pin in conjunction with the adjustment screws. Turn the adjustment screws:

- To the left: and the bubble approaches the screw.
 - To the right: and the bubble goes away from the screw.
- 4 Repeat step 3 on the instrument and tribrach until both levels are centered and no further adjustments are necessary.



After the calibration, no adjustment screw should be loose.


6.1.5

Inspecting the Laser Plummet of the Instrument



The laser plummet is integrated into the vertical axis of the instrument. Under normal conditions of use, the laser plummet does not need adjusting. If an adjustment is necessary due to external influences, the instrument has to be returned to a GeoMax service department.

Inspect the laser plummet step-by-step

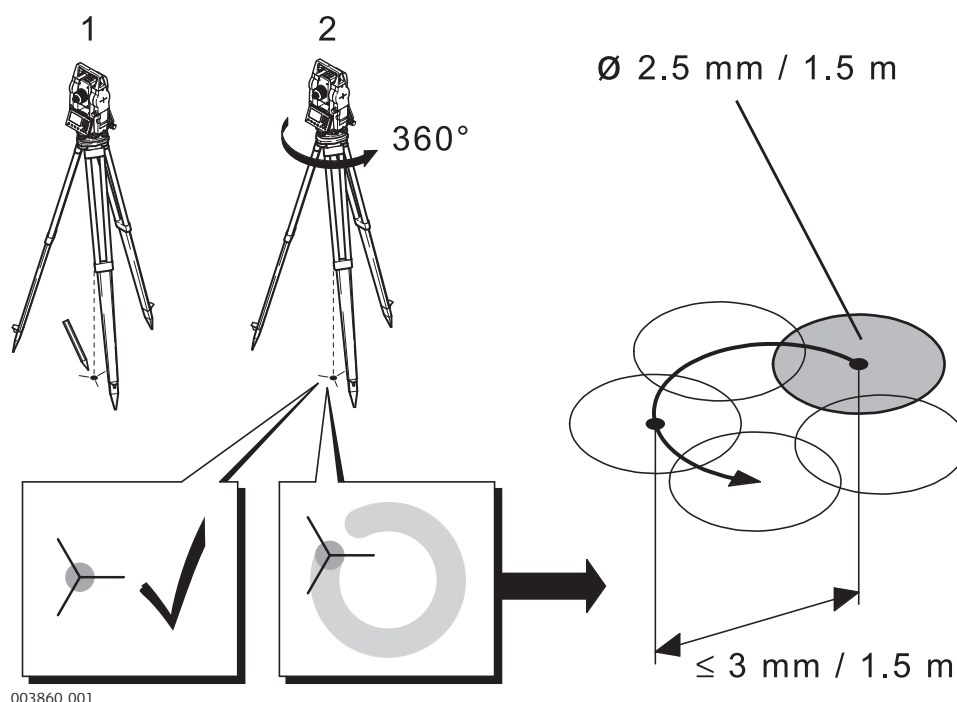


- 1 Set up the instrument on the tripod approximately 1.5 m above the ground and level up.
- 2 To activate the laser plummet, turn on the instrument, and, if tilt correction is set on, the laser plummet activates automatically, and the **Level up** screen appears. Otherwise, tap on the Level/Face icon in status bar.




Inspection of the laser plummet should be carried out on a bright, smooth and horizontal surface, such as a sheet of paper.


- 3 Mark the center of the red laser dot on the ground.
- 4 Turn the instrument slowly through 360°, carefully observing the movement of the red laser dot.

- 
 The maximum diameter of the circular movement described by the center of the laser dot should not exceed 3 mm at a height of 1.5 m.
- 5 If the center of the laser dot makes a clearly circular movement, or moves more than 3mm away from the point which was first marked, an adjustment may be required. Call your nearest GeoMax service department. Depending on brightness and surface type, the size of the laser dot can vary. At a height of 1.5 m, an average diameter of 2.5 mm is estimated.

6.1.6 Servicing the Tripod

Service the tripod step-by-step

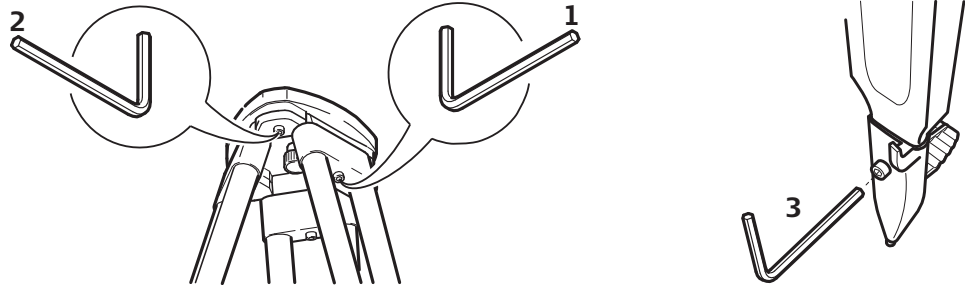


- 
 The connections between metal and timber components must always be firm and tight.
- 1. Tighten the leg cap screws moderately with the allen key supplied.
- 2. Tighten the articulated joints on the tripod head just enough to keep the tripod legs open when lifting the tripod off the ground.
- 3. Tighten the screws of the tripod legs.

6.2 System Information

Description

The **SYSTEM INFO** screen displays instrument, system and firmware information, as well as settings for the date and time.


- 
 Please provide the instrument-related information, such as instrument type, serial number and equipment number, as well as the firmware version and build number when contacting support.

Access

1. Select **Tools** from the **MAIN MENU**.
2. Select **SysInfo** from the **TOOLS** menu.

SYSTEM INFO

This screen displays information about the instrument and operating system.

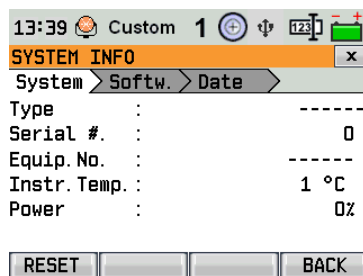

Software information

Field	Description
FW Version	Displays the firmware version number installed on the instrument.
Build	Displays the build number of the firmware.
Current Lang	Displays the current language and version number selected for the instrument.
EDM-Firmware	Displays the version number of the EDM firmware.

6.3

Loading Software

Description

The software can be loaded via a USB memory stick. This process is described below.

Access

1. Select **Tools** from the **MAIN MENU**.
2. Select **Load FW** from the **TOOLS MENU**.



Never disconnect the power supply during the system upload process. The battery must be at least 75% capacity before commencing the upload.

Loading firmware and languages step-by-step

1. To load firmware and languages: Select **Firmware**. The **Select File** screen will appear.
To load only languages: Select **Languages only** and skip to step 4.
2. Select the firmware file from the system folder of the USB memory stick. All firmware and language files must be stored in the system folder to be transferred to the instrument.
3. Press **OK**.
4. The **Upload Languages** screen will appear displaying all language files in the system folder of the USB memory stick. Select **Yes** or **No** for a language file to be uploaded. At least one language must be set to **Yes**.
5. Press **OK**.
6. Press **Yes** on the power warning message to proceed and upload the firmware and/or selected languages.
7. Once successfully loaded, the system will shutdown and restart again automatically.


7

Working with interfaces

7.1

Working with a USB Memory Stick

Insert a USB memory stick step-by-step

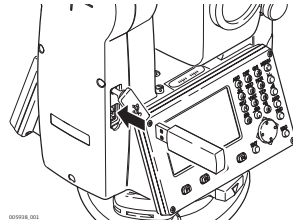

Lift the lid covering the USB host port on the instrument.

Insert the USB memory stick into the USB host port.



Always return to the **Main Menu** before removing the USB memory stick.



GeoMax cannot be held responsible for data loss or any other error that may occur when using a USB memory stick.



- Keep the USB memory stick dry.
- Use it only within the specified temperature range.
- Protect the USB memory stick from direct impacts.

Failure to follow these instructions could result in data loss and/or permanent damage to the USB memory stick.

7.2

Working with Bluetooth

Description

Zoom40 instruments can communicate with external devices by a Bluetooth connection. The instrument Bluetooth is a slave only. The Bluetooth of the external device will be the master, and therefore will control the connection and any data transfer.

Establishing a connection step-by-step

1. On the instrument ensure that the communication parameters are set to **Bluetooth** and **On**. Refer to "5.5 Communication Settings".
2. Activate Bluetooth on the external device. The steps required depend on the Bluetooth driver and other device specific configurations. Refer to the device user manual for information on how to configure and search for a Bluetooth connection.
3. The instrument will appear on the external device. Some devices ask for the identification number of the Bluetooth. The default number for a Zoom40 Bluetooth is 0000. This can be changed by:
 1. Select **Settings** from the **MAIN MENU**.
 2. Select **Comm.** from the **SETTINGS** menu.
 3. Press **BTCode** from the **COMMUNICATION SETTINGS** screen.
 4. Enter a new Bluetooth code in **BT-Code:**
 5. Press **OK** to confirm the new Bluetooth code.
4. When the external Bluetooth device has located the instrument for the first time, a message will display on the instrument stating the name of the external device and requesting confirmation that connection to this device should be allowed.
 1. Press **YES** to allow, or
 2. Press **NO** to disallow this connection.
5. The instrument Bluetooth sends out the instrument name and serial number to the external Bluetooth device.
6. All further steps must be made in accordance to the user manual of the external device.

8 Care and Transport

8.1 Transport

Transport in the field

When transporting the equipment in the field, always make sure that you

- either carry the product in its original transport container,
 - or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright.
 - or remove product from tripod and carry it by its handle.
-

Transport in a road vehicle

Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its container, original packaging or equivalent and secure it.

Shipping

When transporting the product by rail, air or sea, always use the complete original GeoMax packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.

Shipping, transport of batteries

When transporting or shipping batteries, the person responsible for the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.

Field adjustment

Periodically carry out test measurements and perform the field adjustments indicated in the User Manual, particularly after the product has been dropped, stored for long periods or transported.

8.2 Storage

Product

Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "9 Technical Data" for information about temperature limits.

Field adjustment

After long periods of storage inspect the field adjustment parameters given in this user manual before using the product.

Li-Ion batteries

- Refer to "9.5 General Technical Data of the Product" for information about storage temperature range.
 - Remove batteries from the product and the charger before storing.
 - After storage recharge batteries before using.
 - Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.
 - A storage temperature range of 0 °C to +30 °C / +32 °F to +86 °F in a dry environment is recommended to minimize self-discharging of the battery.
 - At the recommended storage temperature range, batteries containing a 40% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.
-

8.3 Cleaning and Drying

Objective, eyepiece and reflectors

- Blow dust off lenses and prisms.
 - Never touch the glass with your fingers.
 - Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these may attack the polymer components.
-

Fogging of prisms

Prisms that are cooler than the ambient temperature tend to fog. It is not enough simply to wipe them. Keep them for some time inside your jacket or in the vehicle to allow them to adjust to the ambient temperature.

Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C/104°F and clean them. Remove the battery cover and dry the battery compartment. Do not repack until everything is dry. Always close the transport container when using in the field.

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

9

Technical Data

9.1

Angle Measurement

Accuracy

Accuracy	Standard deviation HA, VA, ISO17123-3		Display resolution			
	["]	[mgon]	["]	[°]	[mgon]	[mil]
1	0.3		1	0.0001	0.1	0.01
2	0.6		1	0.0001	0.1	0.01
5	1.5		1	0.0001	0.1	0.01

Characteristics

Absolute, continuous, diametric.

9.2

Distance Measurement with Reflectors

Range

Reflector	Range A		Range B		Range C	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
Standard prism	1800	6000	3000	10000	3500	12000
Reflector foil 60 mm x 60 mm	150	500	250	800	250	800

Shortest measuring distance: 1.5 m

Atmospheric conditions

Range	Description
A	Strong haze, visibility 5km; or strong sunlight, severe heat shimmer
B	Light haze, visibility about 20km; or moderate sunlight, slight heat shimmer
C	Overcast, no haze, visibility about 40km; no heat shimmer

Accuracy

Accuracy refers to measurements to standard reflectors.

EDM measuring mode	Standard deviation	Measurement time, typical [s]
IR-Standard	2 mm + 2 ppm	2.4
IR-Quick	3 mm + 2 ppm	2.0
IR-Continuous	3 mm + 2 ppm	0.33
Foil	5 mm + 2 ppm	2.4

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy.

Characteristics

Absolute, continuous, diametric.

9.3

Distance Measurements without Reflectors (Reflectorless mode)

Range

N5 (without reflector)

Kodak Gray Card	Range D		Range E		Range F	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
White side, 90 % reflective	250	820	400	1312	>500	>1640
Grey side, 18 % reflective	100	330	150	490	>250	>820

Atmospheric conditions

Range	Description
D	Object in strong sunlight, severe heat shimmer
E	Object in shade, or overcast
F	Underground, night and twilight

Accuracy

Standard measuring	ISO 17123-4	Measure time, typical [s]	Measure time, maximum [s]
0 m - 500 m	2 mm + 2 ppm	3 - 6	15
>500 m	4 mm + 2 ppm	3 - 6	15

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy.

Continuous measuring*	Standard deviation	Measure time, typical [s]
Continuous	5 mm + 3 ppm	1.0

* Accuracy and measure time depend on atmospheric conditions, target object and observation situation.

Characteristics

Type	Description
Type	Coaxial, visible red laser
Carrier wave	658 nm
Measuring system	System Analyzer Basis 320 MHz

Laser dot size

Distance [m]	Laser dot size, approximately [mm]
at 50	12 x 24

9.4

Conformity to National Regulations


9.4.1

Zoom40

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)

- Hereby, GeoMax AG, declares that the radio equipment type Zoom40 is in compliance with the Directive 2014/53/EU and other applicable European Directives. The full text of the EU declaration of conformity may be consulted at <http://www.geomax-positioning.de/Downloads.htm>.

 Class 1 equipment according European Directive 2014/53/EU (RED) can be placed on the market and be put into service without restrictions in any EEA Member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 2014/53/EU has to be approved prior to use and operation.

Frequency band

Type	Frequency band [MHz]
Bluetooth	2402 - 2480

Antenna

Type	Antenna	Gain [dBi]
Bluetooth	Internal PCB antenna	0

Output power

Type	Output power [mW]
Bluetooth	4.0

9.4.1.1

Dangerous Goods Regulations

Dangerous Goods Regulations

The products of GeoMax are powered by Lithium batteries.

Lithium batteries can be dangerous under certain conditions and can pose a safety hazard. In certain conditions, Lithium batteries can overheat and ignite.



When carrying or shipping your GeoMax product with Lithium batteries onboard a commercial aircraft, you must do so in accordance with the **IATA Dangerous Goods Regulations**.



GeoMax has developed **Guidelines** on "How to carry GeoMax products" and "How to ship GeoMax products" with Lithium batteries. Before any transportation of a GeoMax product, we ask you to consult these guidelines on our web page (<http://www.geomax-positioning.com/dgr>) to ensure that you are in accordance with the IATA Dangerous Goods Regulations and that the GeoMax products can be transported correctly.



Damaged or defective batteries are prohibited from being carried or transported onboard any aircraft. Therefore, ensure that the condition of any battery is safe for transportation.

9.4.2

Internal battery ZBA301

Conformity to national regulations

- FCC Part 15 (applicable in US)



- Hereby, GeoMax AG, declares that the product/s is/are in compliance with the essential requirements and other relevant provisions of the applicable European Directives. The declaration of conformity may be consulted at "<http://www.geomax-positioning.com/Downloads.htm>".

9.5

General Technical Data of the Product

Telescope

Magnification:	30 x
Free Objective aperture:	40 mm
Focusing:	1.7 m/5.6 ft to infinity
Field of view:	1°30'/1.66 gon. 2.6 m at 100 m

Compensation

Quadruple axis compensation (dual-axis compensator with HA-collimation and VA-Index).

Angular accuracy		Setting range	
["]	[']	[gon]	
1, 2, 5	±3	±0.055	

Level

Electronic level resolution: 5"



Control unit

C&T display: 240x320 pixels, LCD, backlit, 10 lines with 30 characters each.

Instrument Ports

Name	Description
USB port	USB port for communication with 3rd party software.
USB host port	USB memory stick port for firmware upload.

Instrument Dimensions

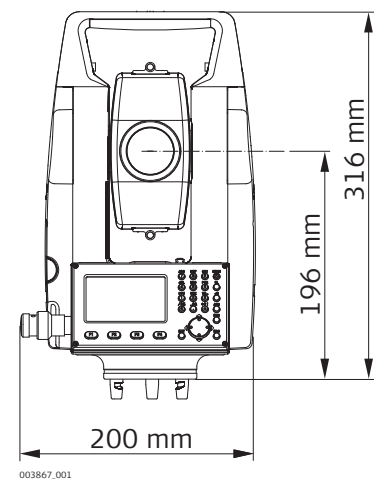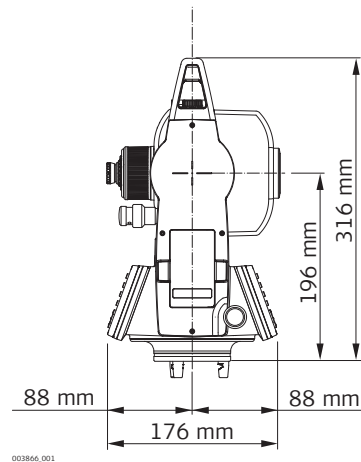

Weight

Instrument:	5.3 kg
Tribrach:	760 g
Battery ZBA301:	195 g

Tilting axis height

Type	Value
Without tribrach:	196 mm
With tribrach:	240 mm ±5 mm

Laser plummet

Type	Value
Type	Visible red laser class 2
Location	In standing axis of instrument
Accuracy	Deviation from plumb line: 1.5mm (2 sigma) at 1.5m instrument height
Diameter of laser point	2.5mm at 1.5m instrument height

Memory

Memory Size:	2 GB
--------------	------

Battery ZBA301

Type:	Li-Ion
Voltage:	7.4 V
Capacity:	4.4 Ah
Operating time:	approximately 10 hours

Environmental specifications**Temperature**

Type	Operating temperature		Storage temperature	
	[°C]	[°F]	[°C]	[°F]
Instrument	-20 to +50	-4 to +122	-40 to +70	-40 to +158
Battery	-20 to +50	-4 to +122	-40 to +70	-40 to +158

Protection against water, dust and sand

Type	Protection
Instrument	IP54 (IEC 60529)

Humidity

Type	Protection
Instrument	Max 95% non condensing. The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

Automatic corrections

The following automatic corrections are made:

- Line of sight error
- Tilting axis error
- Earth curvature
- Standing axis tilt
- Vertical index error
- Refraction
- Compensator index error
- Circle eccentricity

9.6

Scale Correction

Use of scale correction

By entering a scale correction, reductions proportional to distance can be taken into account.

- Atmospheric correction.
- Reduction to mean sea level.
- Projection distortion.

Atmospheric correction

The slope distance displayed is correct if the scale correction in ppm, mm/km, which has been entered corresponds to the atmospheric conditions prevailing at the time of the measurement.

The atmospheric correction includes:


- Adjustments for air pressure
- Air temperature

For highest precision distance measurements, the atmospheric correction should be determined with:

- An accuracy of 1ppm
- Air temperature to 1°C
- Air pressure to 3mbar


Atmospheric corrections °C

Atmospheric corrections in ppm with temperature [°C], air pressure [mb] and height [m] at 60 % relative humidity.

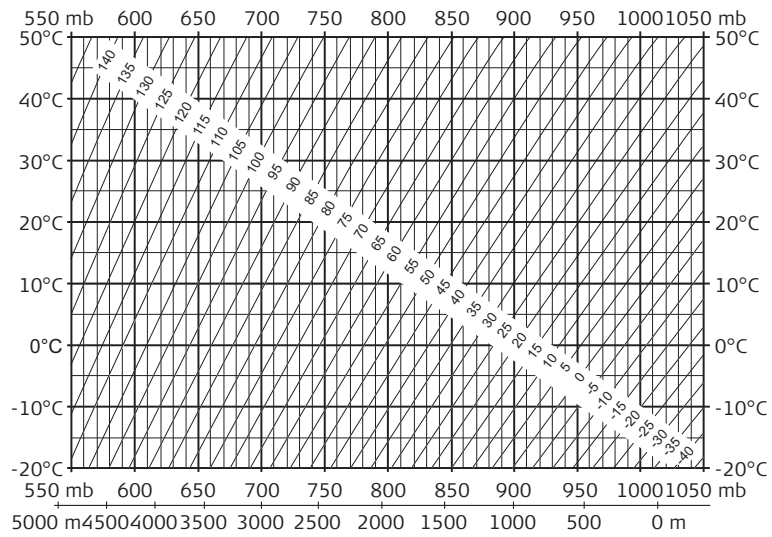


Atmospheric correction °F

Atmospheric corrections in ppm with temperature [°F], air pressure [inch Hg] and height [ft] at 60 % relative humidity.

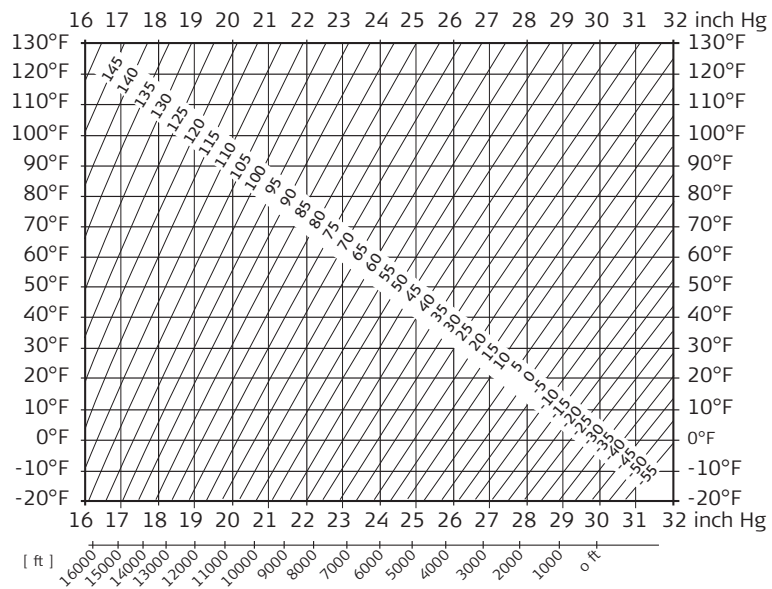

Formulas

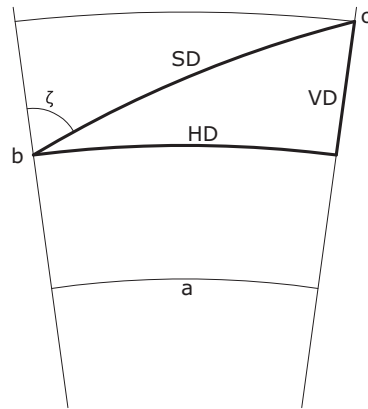

- a Mean Sea Level
- b Instrument
- c Reflector
- SD Slope distance
- HD Horizontal distance
- VD Height difference

The instrument calculates the slope distance, horizontal distance, and height difference in accordance with the following formulas. Earth curvature ($1/R$) and mean refraction coefficient ($k = 0.13$) are automatically taken into account when calculating the horizontal distance and height difference. The calculated horizontal distance relates to the station height and not to the reflector height.

Slope distance

$$SD = D_0 \cdot (1 + \text{ppm} \cdot 10^{-6}) + p$$

- SD Displayed slope distance [m]
- D0 Uncorrected distance [m]
- ppm Atmospheric scale correction [mm/km]
- p prism constant [m]

Horizontal distance

$$HD = Y - A \cdot X \cdot Y$$

- HD Horizontal distance [m]
- Y $SD \cdot |\sin \zeta|$
- X $SD \cdot \cos \zeta$
- A $(1 - k/2)/R = 1.47 \cdot 10^{-7} \text{ [m}^{-1}\text{]}$

ζ = Vertical circle reading

$k = 0.13$ (mean refraction coefficient)

$R = 6.378 \cdot 10^6 \text{ m}$ (radius of the earth)

Height difference

$$VD = X + B \cdot Y^2$$

- VD Height difference [m]
- Y $SD \cdot |\sin \zeta|$

$$X = SD * \cos\zeta$$

$$B = (1 - k)/2R = 6.83 * 10^{-8} \text{ [m}^{-1}\text{]}$$

ζ = Vertical circle reading

$k = 0.13$ (mean refraction coefficient)

$R = 6.378 * 10^6\text{m}$ (radius of the earth)


Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from GeoMax. Such software is protected by copyright and other laws and its use is defined and regulated by the GeoMax Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the GeoMax Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the GeoMax home page at <http://www.geomax-positioning.com/swlicense> or collected from your GeoMax distributor.


You must not install or use the software unless you have read and accepted the terms and conditions of the GeoMax Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Instrument axis

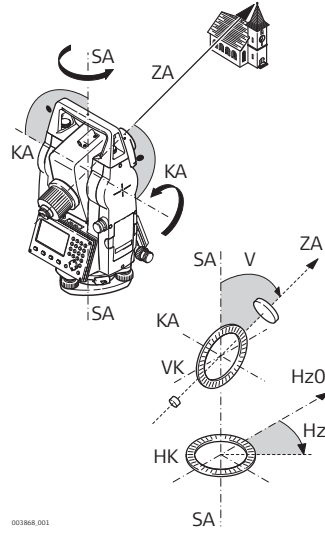


- ZA = **Line of sight / collimation axis**
Telescope axis = line from the cross hairs to the center of the objective.
- SA = **Standing axis**
Vertical rotation axis of the telescope.
- KA = **Tilting axis**
Horizontal rotation axis of the telescope. Also known as the Trunion axis.
- V = **Vertical angle / zenith angle**
- VK = **Vertical circle**
With coded circular division for reading the vertical angle.
- Hz = **Horizontal direction**
- HK = **Horizontal circle**
With coded circular division for reading the horizontal angle.

Plumb line / compensator

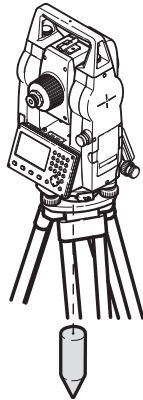


Direction of gravity. The compensator defines the plumb line within the instrument.

Standing axis inclination

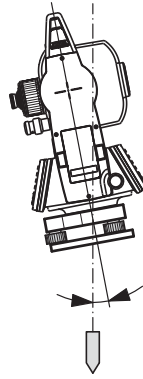


Angle between plumb line and standing axis. Standing axis tilt is not an instrument error and is not eliminated by measuring in both faces. Any possible influence it may have on the horizontal direction or vertical angle is eliminated by the dual axis compensator.

Zenith

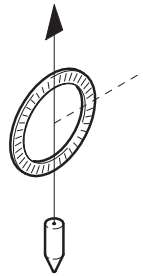


Point on the plumb line above the observer.

Crosshairs

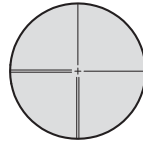

Glass plate within the telescope with reticle.

Line-of-sight error (horizontal collimation)

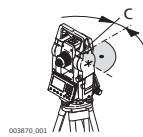


The line-of-sight error (c) is the deviation from the perpendicular between the tilting axis and line of sight. This could be eliminated by measuring in both faces.

Vertical index error



With a horizontal line of sight the vertical circle reading should be exactly 90° (100 gon). The deviation from this value is termed the Vertical index error (i).

Explanation of displayed data

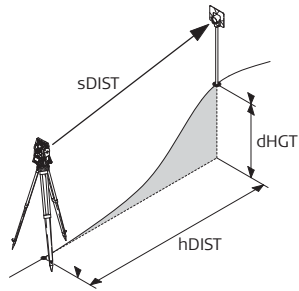

sDIST
Indicated meteorological corrected slope distance between instrument tilting axis and center of prism/laser dot

hDIST
Indicated meteorological corrected horizontal distance

dHGT
Height difference between station and target point



Depending on local firmware versions the menu items may differ.

Menu Tree

--	Survey	
--	Settings	
	-- General	
	--	Tilt Correction, H.A. Correction
	-- Regional	
	--	H.A. Incr., V.A. Setting, Language, Lang. Choise, Time(24h), Date, Format
	-- Screen	
	--	Screen Ill., Crosshair Ill., Touch Screen, Auto-Off, Beep, Sector Beep
	-- EDM	
	--	Mode, Type, Abs. Const, Laser-Beam
	-- Comm.	
	--	Port, Bluetooth, Baud rate, Data bits, Parity, End-mark, Stop bits
	-- Units	
	--	Angle Unit, Min.Reading, Dist. Unit, Temp. Unit, Press. Unit
--	Tools	
	-- Calibr.	
	--	HA-Collimation, Vertical Index, View Adjustment Data
	-- Sys Info	
	--	Type, Serial, Equipment Number, Instr. Temp., Power, FW Version, Build, Current Lang., EDM-Firmware, Date, Time
	-- Load FM	
	--	Firmware, Languages only
--	EXIT	



866147-1.1.0en

Original text

© 2018 GeoMax AG, Widnau, Switzerland